
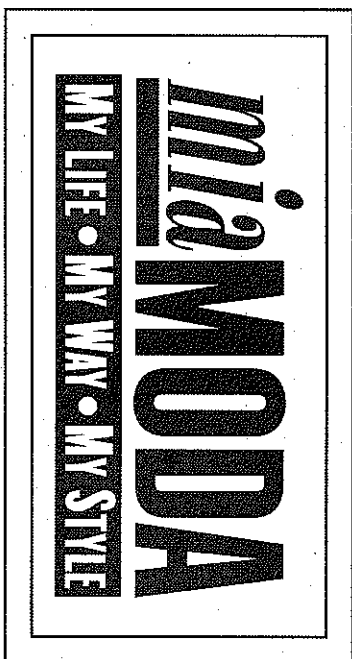


# Alto

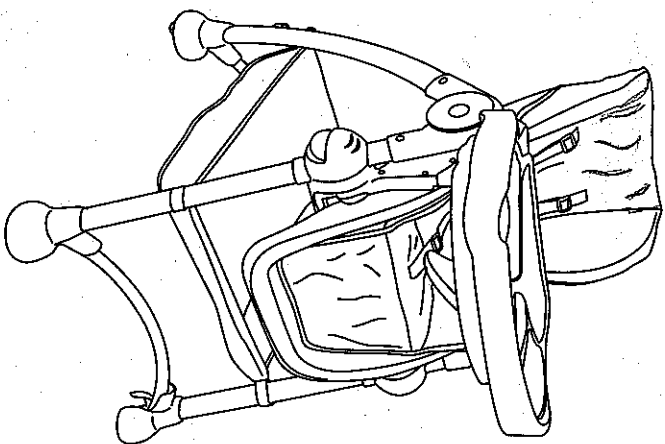

Please read this owner's manual carefully and keep it in a safe place.

Dream On Me Model NO : 477

Owner's  
Manual

Dear Customer,

Thank you for purchasing your new Mia Moda high chair. We are pleased that you have chosen this product and hope you will be completely satisfied with the service you receive from this item. We advise you to read the instructions BEFORE assembly and USE of the product, then KEEP THEM IN A SAFE PLACE FOR FUTURE USE. Failure to read instructions carefully can jeopardize the safety of your child. Careful attention to the care instructions of the stroller will enable long and trouble free use of your new purchase.

In the event your Mia Moda product requires repair, please contact us.  
Our Consumer Services department will provide you the proper steps to ensure the fastest remedy to your problem.

Sincerely,  
Your Dream On Me Team  
170 Circle Drive North  
Piscataway, NJ 08854, USA  
TEL : 732-748-1300  
[www.miamodalinc.com](http://www.miamodalinc.com)

***mia*MODA**


## Care & Maintenance

1. The high chair can be cleaned by sponging with warm water and a mild detergent. A mild disinfectant may be used.
2. Stubborn marks may be removed with a non-abrasive cream cleaner. Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.

*mia***MODA**

## Parts list

1. Snack tray assembly. See fig 1.
2. Screws. See fig 2.
3. Big tray liner. See fig 3.
4. Small tray liner. See fig 4.
5. Seat assembly. See fig 5.
6. Left & right caps. See fig 6.
7. Front leg assembly. See fig 7.
8. Rear leg assembly basket. See fig 8.
9. Stoppers. See fig 9.
10. Casters. See fig 10.

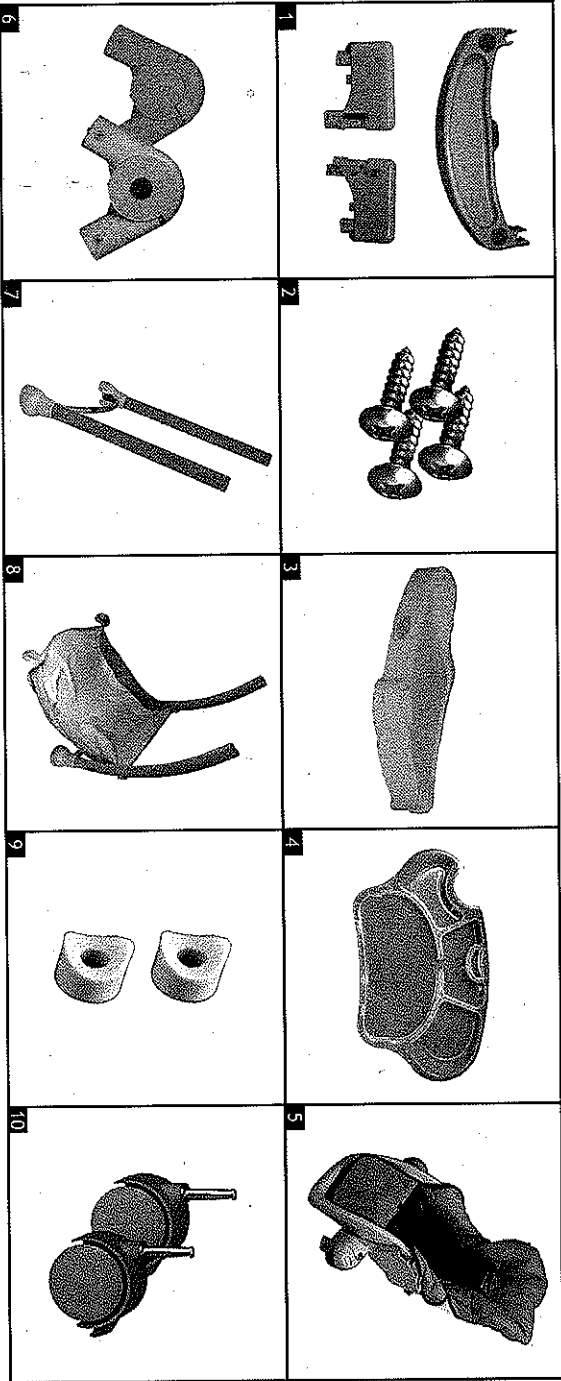

## Assembly the high chair








1. Put the seat to the reclined position (see part "Recline the seat"). Insert the tray supports to the sides of the seat by fixing with the screws but not too tight. See fig 11 & 12 & 13.

## Assembly the rear legs

1. Push the rear leg tube into the cap by pressing the snap of each side of the tube until hear the "click" into place. See fig 14.
2. Repeat the fig14 operation with another cap. See fig 15.
3. Push the 2 casters into each of the rear leg until hear it "click" into place. See fig 16.

## Assembly the front legs







1. Push the front leg tube to the seat by pressing the snap of each side of the tube until hear the "click" into place. See fig 17.

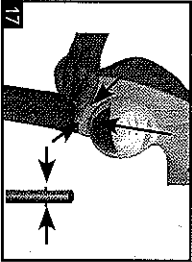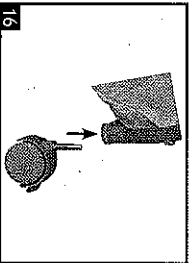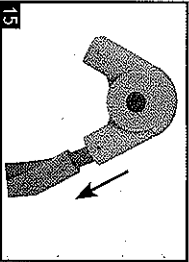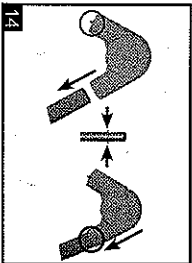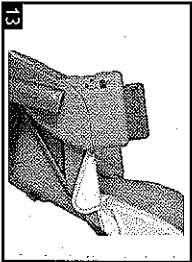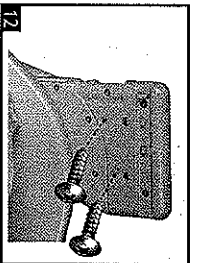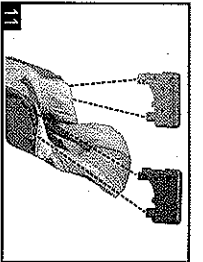

2. Push the front leg tube into the cap by pressing the snap of each side of the tube until hear the "click" into place. See fig 18.
3. Fix the 2 plastic stoppers with the screws on the front leg tubes, then fix the basket on. See fig 19.

### Assembly the snack tray



1. Insert the left side of the snack tray to the armrest and revolve to click it to the right side. See fig 20.
2. To open the snack tray, you can push the red button of the armrest. See fig 21.
3. To install big tray liner, align the slots on the tray with the bars on the snack tray (b). Pull out the one-hand tray release lever (a) and push the tray into one of three positions. Tug on the tray to make sure it is secured. To remove, pull out the one-hand tray release lever and remove the tray. See fig 22.
4. When using high chair, the snack tray should be on high chair. Before install big tray, it need to install the snack tray. See fig 23.

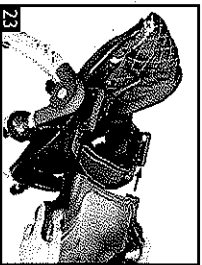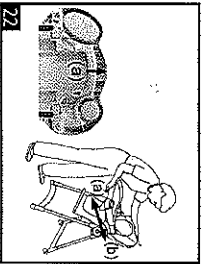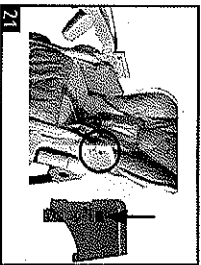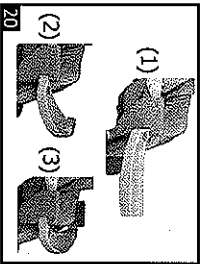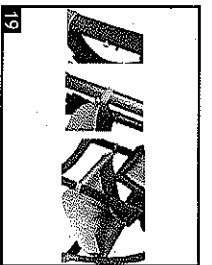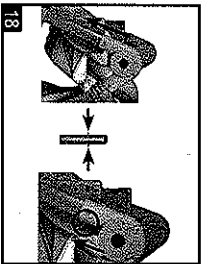

5. Fit the grooves (a) on the tray liner into to the back of the tray, then lay down the liner and press in (b) for a snug fit. To remove, pull up on the front of the tray liner (c). See fig 24.



### Unfolding & folding the high chair

1. To unfold the high chair, grasp the caps and push in on the large red button (a) on each side of the high chair. Push legs apart until they lock into place. To fold the high chair, do the same operation inverse by pushing the red buttons. See fig 25.

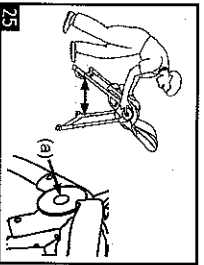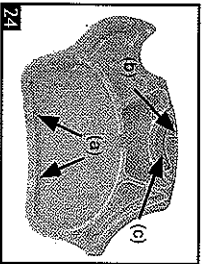

### Height adjustment

1. Squeeze the red height adjusters on each side of the high chair and raise or lower the high chair to the desired position until it clicks into position. There are 8 adjustable positions. Pull up on the chair to make sure it is locked into position. See fig 26.

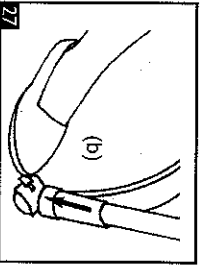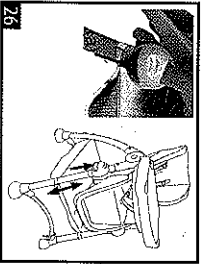

### Using casters

1. To lock caster, depress tab. Pull up on tab to release (b). See fig 27.

## Recline adjustment





1. Pull up on the red recline lever (a) on the seat back and adjust to one of four positions. Make certain the seat is locked into position before placing the baby in the high chair. See fig 28 & 29.

## Restraining system

1. Release all buckles on the restraint. Place the baby in the seat and bring the crotch strap up between the baby's legs and the harness on the baby's shoulders (a). Fasten each buckle (b) and pull the straps to tighten the restraint for a snug fit. To adjust the restraint, use the buckles (c). See fig 30.

## Folding & storage

1. The tray conveniently stores on the back legs of the high chair. Align the slots under the tray with the knobs on the back legs and gently push down. This storage feature is designed for the tray only. See fig 31.

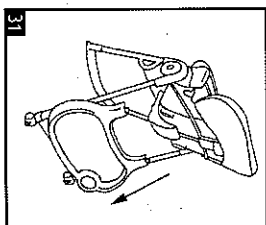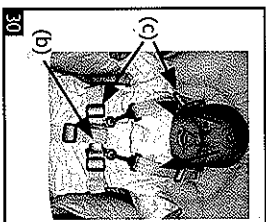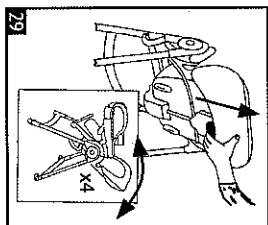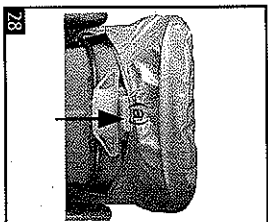



# **▲ WARNING**

Failure to follow these warnings and the assembly instructions could result in serious injury or death

1. High chair is suitable for children 6 months to 36 months. High chair is not suitable for children under 6 months.
2. Do not use if any part is broken, torn or missing.
3. Do not use the high chair until the child can sit up unaided.
4. Do not use the high chair unless all components are correctly fitted and adjusted.
5. Do not leave your child unattended, even for the shortest time.
6. To prevent serious injury or death from falls or sliding out, ensure the harness is correctly fitted and that the child is secure in the restraint.
7. Avoid placing the chair near naked heat sources such as electric bar fires, gas fires, etc. Or where a child could gain access to any other kind of hazard.
8. Ensure all users are familiar with the products operation. It should always assemble and operate easy. If it does not, do not force the mechanism-stop and read the instructions.
9. Only use on a flat stable surface.
10. Ensure your high chair is fully erected before placing your child inside.
11. Do not move the high chair with your child inside.

## **▲ WARNING**

Failure to follow these warnings and the assembly instructions could result in serious injury or death

12. Do not allow your child to climb unassisted into, play with or hang onto your high chair.
13. This is not a toy.
14. All additional hazards such as electrical flex should be kept out of reach of the child in the high chair.
15. Assemble the chair once only, it is not intended to be taken apart and reassembled.
16. Ensure that the harness is fixed correctly before use.
17. Always secure child in the restraint.
18. The child should be secured in the high chair at all times by the restraining system, either in the reclining or upright position. The tray is not designed to hold the child in the chair. It is recommended that the high chair be used in the upright position only by children capable of sitting upright unassisted.