


FIGURE

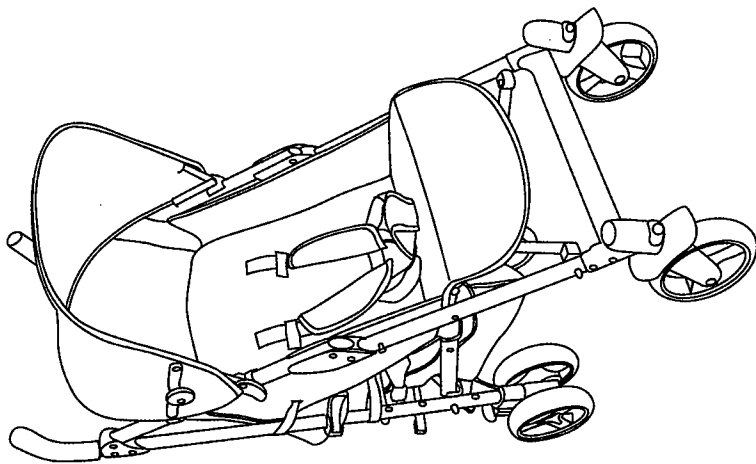

***mia*MODA**
MY LIFE • MY WAY • MY STYLE

Please read this owner's manual carefully and keep it in a safe place.

Owner's
Manual

Model No: #500

Dear Customer,

Thank you for purchasing your new Mia Moda stroller. We are pleased that you have chosen this product and hope you will be completely satisfied with the service you receive from this item. We advise you to read the instructions BEFORE assembly and USE of the product, then KEEP THEM IN A SAFE PLACE FOR FUTURE USE. Failure to read instructions carefully can jeopardize the safety of your child. Careful attention to the care instructions of the stroller will enable long and trouble free use of your new purchase.

In the event your Mia Moda product requires repair, please contact us.
Our Consumer Services department will provide you the proper steps to ensure the fastest remedy to your problem.

Sincerely,
Mia Moda (A division of Dream on Me)
170 Circle Drive North
Piscataway, NJ 08854, USA
TEL : 732-748-1300
www.miamodainc.com

***mia*MODA**

CLEANING & MAINTENANCE







AVOID SERIOUS INJURY; PLEASE DO A ROUTINE MAINTAINANCE INSPECTION.

1. Never force any folding or adjustable parts.
2. Ensure that all the devices are correctly engaged before use.
3. Regularly lubricate all moving parts with silicon spray only.
4. To clean plastic or cloth surface, use lukewarm water with mild detergent only. To clean metal surface, wipe clean with soft, damp cloth. Do not use abrasives or solvents.
5. Do not keep the stroller in the damp, cold or hot place.
6. Check the folding lock when not using. Please do not leave your stroller outside unprotected.
7. Regularly check unit to ensure no parts are loose or broken.


***mia*MODA**

How to use and fold the baby stroller


1. Release the folding lock and push the front leg forward to unfold the stroller. (figure 1&2)
2. Push down the safety lock until the stroller fixing position. (figure 3)
3. Assemble and remove the front wheel. Install the front wheel as figure 4, and take off it as figure 5.
4. Turn left the lever to lock front wheel. (figure 6), and turn right the lever to release it. (figure 7).

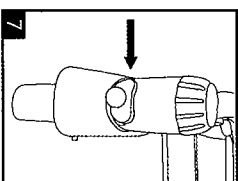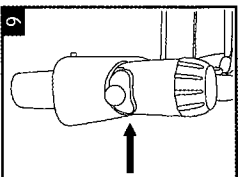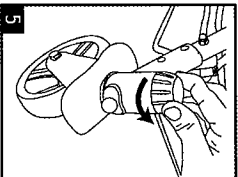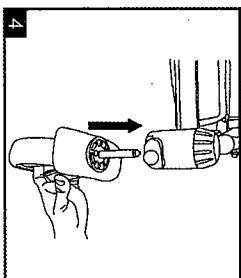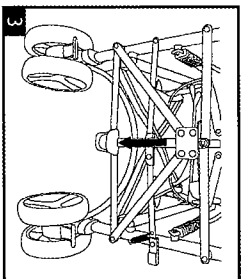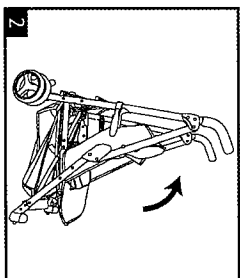



5. **Adjust the backrest:** When you adjust the backrest, just boost up the backrest, contrary just draw the backrest pole until your satisfied degree and then undo. (figure 8)

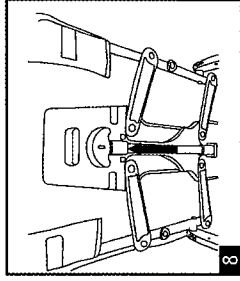

6. Assemble the canopy as drawing. (figure 9&10)

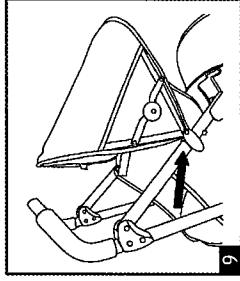



7. Adjust the footrest. (figure 11)

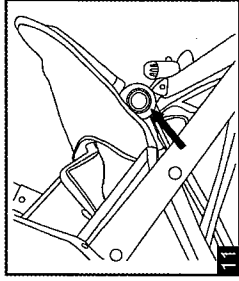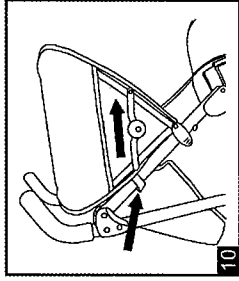

8. **Fitting the harness:** Avoid serious injury from falling or sliding out. Always use seat belt. After fastening buckles, adjust belts to get a snug fit around your child.

To attach the harness: Insert both fasteners security into the clasp. Adjust each strap length as needed.

To undo the harness: Press the fastener buckles and pull apart. (figure 12&13)

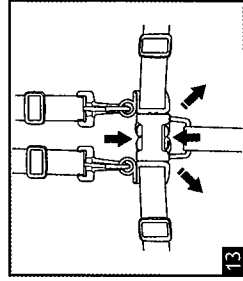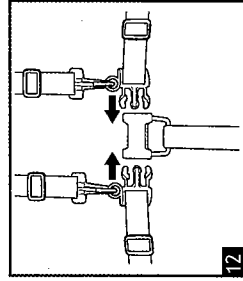





9. **Folding the stroller:** Before folding the stroller, please make sure the canopy is folded, seat position is erect, and there is nothing in the mesh basket.

A: Fold the canopy. (figure 14)

B: Up and release the safety lock, then push down the side panel on the right side of stroller. (figure 15)

C: Hold the handgrip and push forward. (figure 16)

D: Folding the stroller with automatic lock. (figure 17)

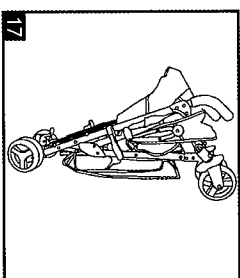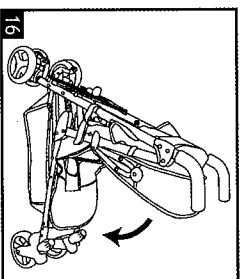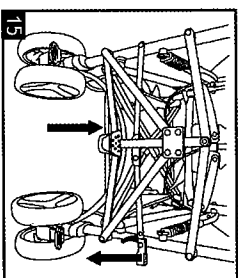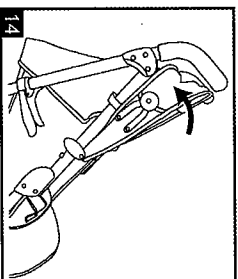

⚠ WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death

1. Stroller is suitable for children 6 months to 36 months. Stroller is not suitable for children under 6 months.
2. Ensure that all the locking devices are engaged before use. Check that the stroller or seat attachment devices are correctly engaged before use.
3. Avoid serious injury from falling or sliding out. Always use seat belt .After fastening buckles, adjust belts to get a snug fit around your child.
4. Stroller is for one baby only.
5. Open stroller away from the child before use.
6. Do not use the stroller when the road is not smooth. Do not keep stroller near the stove or other similar dangerous places.
7. Never leave the child unattended while in the stroller. Do not allow the baby to crawl out under or over the bar or stand in the stroller.
8. Do not lift the stroller with the baby inside.
9. The backrest should be adjusted by the adult.

WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death

10. Any accessories which are not approved by the manufacturer shall not be used.
To prevent a hazardous, unstable condition, never place purses, shopping bags, parcels or accessory items on the handle or canopy
11. This product is not suitable for running or skating.
12. Always use the crotch strap in combination with the waist belt.
13. Follow the instructions on the seat pad to wash the seat pad.
14. Use of the stroller with a child weight more than 40lbs (18kg) could be unsafe.
15. To prevent a hazardous, unstable condition, do not place more than 11lbs(5kg) in the storage basket.
16. To prevent a hazardous, unstable condition, do not place more than 1.7lbs(0.8kg) in canopy pocket.